



**A Watch You Can Trust**

**INSTRUCTION MANUAL FOR  
WATCH CALIBRE  
Y704D**



**WARNING**



**THIS PRODUCT CONTAINS A BUTTON BATTERY**

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian

Poisons Information Centre immediately on 13 11 26

(New Zealand 0800 764 766) for 24 / 7 fast, expert advice.

# Instruction Manual

# LORUS

## CAL. Y704 (R23 SERIES)

# LORUS

## ■ CHARACTERISTICS

### 1. TIME/CALENDAR MODE

Hour, minute, second, year, month, date and the day of the week.

- **Automatic Calendar Function**

Calendar adjusts automatically for odd and even months including Februaries of leap years.

- **Time Display Format**

Choice of time display format, either 12-hour display with AM/PM indicators or 24-hour display, is available.

### 2. DAILY ALARM

The alarm can be set to sound on a 24-hour basis.

### 3. STOPWATCH

The stopwatch can measure up to 9 hours 59 minutes and 59 seconds in 1/100 second increment. The stopwatch features the following functions;

- Standard Measurement
- Accumulated Elapsed Time Measurement
- Lap Time Measurement

Up to 5 lap times can be measured and recorded.

 
- **Memory Recall Function**

 
Each recorded lap time and the fastest and slowest lap times can be recalled after measurement.

### 4. ILLUMINATING LIGHT


The built-in electroluminescent backlight illuminates the display for easy viewing in darkness.

## ■ BUTTONS AND DISPLAY

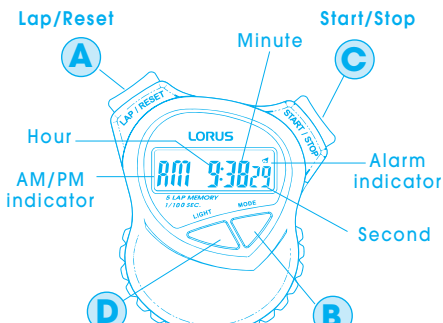

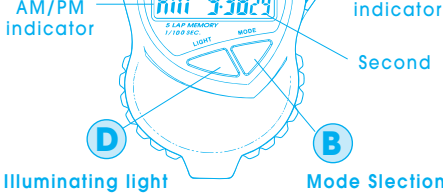

 Press button B to select display mode. Display mode changes over in the following order by each press of the button.

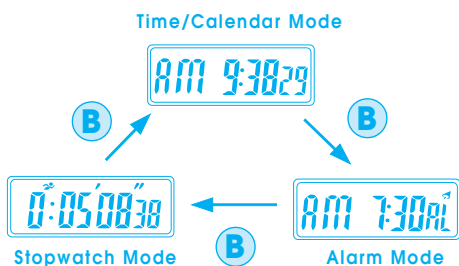

## ■ HOW TO SET THE TIME/CALENDAR



 
1. Press button B to go to the Time/Calendar Mode.
2. Press and hold button B for 2 seconds, the display changes to the Time/Calendar Setting Mode. The second numeral starts flashing.
3. Press button A to select an item to be adjusted. Items change over in the following order.



- ❖ When an item is selected for adjustment, it starts flashing.
4. Use button C to adjust each item.
    - ❖ For the second setting, while the second numeral is flashing, press button C in accordance with a time signal. The second numeral is reset to "00" and starts counting immediately.
    - ❖ For the choice of time display format, each press of button C selects alternately 12-hour display or 24-hour display.
    - ❖ For the minute, hour, month, date and year settings, each press of button C advances the displayed numeral by one. Keep button C pressed to advance the numeral quickly.
  5. Press button A to confirm the adjustment of the selected item and move on to the next item.
  6. Upon completion of all necessary adjustments, press button B to return to the Time/Calendar Mode.
    - ❖ Under 12-hour display, an "AM" indicator in the morning and a "PM" indicator from the afternoon are displayed.
    - ❖ Once year, month and date are set, the day of the week is automatically set accordingly.

### How to check the calendar


Keep button C pressed while in the Time/Calendar Mode. While the button is kept pressed, the day of the week, month and date are displayed.

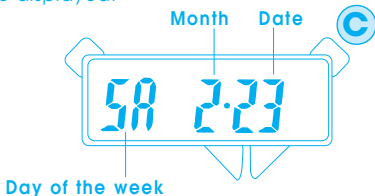

## ■ HOW TO SET THE ALARM



 
## ■ HOW TO SET THE ALARM

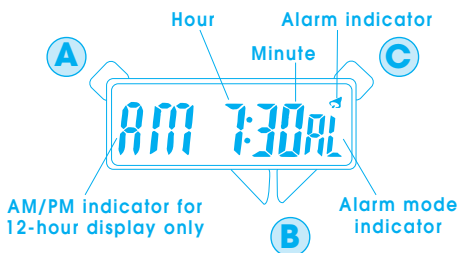

1. Press button B to go to the Alarm Mode. Alarm Mode indicator "AL" appears.
2. Press and hold button B for 2 seconds to change the display to the Alarm Setting Mode. The hour numeral starts flashing.
3. Use button C to set the hour.
  - ❖ Each press of button C advances the displayed numeral by one. Keep button C pressed to advance the numeral quickly.
4. Press button A to confirm the hour setting and move on to the minute setting. The minute numeral starts flashing.
5. Use button C to set the minute.
  - ❖ Each press of button C advances the displayed numeral by one. Keep button C pressed to advance the numeral quickly.
6. Press button B to complete the alarm setting.
7. Press button C to engage the alarm. The alarm indicator appears.
8. Upon completion of all necessary adjustments, press button B to return to the Time/Calendar Mode.

### Alarm engagement/disengagement

Press button C in the Alarm Mode. Each press of button C alternately engages or disengages the alarm. When the alarm is engaged, the alarm indicator appears at the upper-right corner of the display regardless of the display mode.

	Alarm engaged
	Alarm disengaged

### How to stop the alarm while sounding

The alarm sounds for one minute at the designated time. To stop it manually while sounding, press any button in any display mode.

### How to check the alarm time

 
Keep button A pressed in the Time/Calendar Mode. While the button is kept pressed, the set alarm time is displayed.

## ■ HOW TO USE THE STOPWATCH

- The stopwatch can measure up to 9 hours, 59 minutes and 59 seconds in 1/100-second increment. When the measurement is over 9 hours 59 minutes 99, the stopwatch will be reset to "0:00'00"00" and start counting again.

### Stopwatch operation

Press button B to go to the Stopwatch Mode.

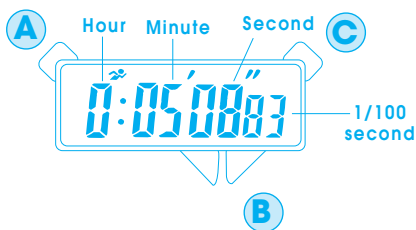

- Even if the display is changed from the Stopwatch Mode to another while measurement is in progress, the stopwatch continues timing properly. However, after measurement is finished, be sure to reset the stopwatch in order to avoid wasting its battery energy.



- ❖ Press button A to reset the stopwatch after measurement.

### Standard Measurement

1. Press button C to start and stop the stopwatch.
2. Use button A to reset the stopwatch.



### Accumulated Elapsed Time Measurement

 
1. Press button C to start, stop and restart the stopwatch as many times as required.
2. Use button A to reset the stopwatch.



### Lap Time Measurement

Up to 5 lap times can be displayed and recorded during measurement. In order to recall the recorded lap times after measurement, use Memory Recall Function before resetting the stopwatch.

1. Press button C to start the stopwatch.
2. Press button A to check lap time. The lap time is displayed and recorded while the measurement of total running time is still in progress.
3. Press button C to stop the measurement.
4. Press button A to reset.



- ❖ With each press of button A, the display shows the lap time for 5 seconds and automatically return to the display of total running time.

### Memory Recall Function

 
1. When the lap time measurement is finished, press button B to go to the Memory Recall Display.



2. Press button A to read each recorded lap time. The fastest and the slowest lap times as well as each recorded lap time are displayed in the following order.



2. Press button A to read each recorded lap time. The fastest and the slowest lap times as well as each recorded lap time are displayed in the following order.

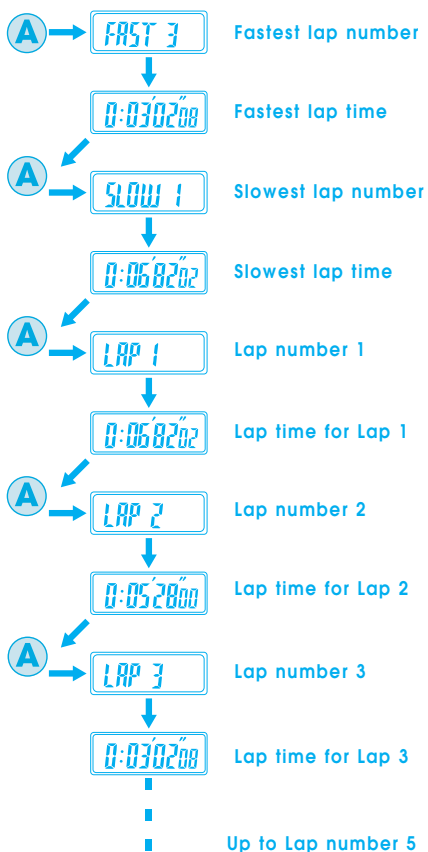

❖ Use button C to display the lap times in the reverse order.

3. Press button B to return to the Time/Calendar Mode.

## ■ ILLUMINATING LIGHT

Press and hold button D. The light illuminates the display with 3 seconds delay.



## ■ BATTERY CHANGE


The miniature lithium battery Maxell CR2032, which powers your watch, should last approximately 3 years. However, because it is inserted at the factory, the actual life of the battery once in your possession may be less than 3 years. Be sure to replace the battery to prevent any possible malfunction as soon as it runs down. To replace the battery, we recommend taking the watch to a local watch repair shop.

**Note:** If the illuminating light is used for longer than 2 seconds per day, the battery life may be shorter than the above specified period.

## ■ CARE OF YOUR LORUS WATCH

This watch contains precise electronic components. Never attempt to open the case or remove the back cover.

### • BATTERY



**CAUTION**

**Do not expose the old battery to fire or recharge it. Keep it at a place beyond the reach of children. If a child swallows it, consult a doctor immediately.**

### • WATER RESISTANT

\* If your watch is 200 M/20 BAR, 100 M/10 BAR or 50 M/5 BAR water resistant, it is so indicated on the dial/case back.

Condition of use	Accidental contact with water, such as	Swimming and taking a shower	Skin diving	Scuba diving
Indication				

If your watch is 200 M/20 BAR, 100 M/10 BAR or 50 M/5 BAR water resistant, it is so indicated on the dial/case back.

Condition of use Indication on the dial/ case back	Accidental contact with water, such as splashes and rain	Swimming and taking a shower	Skin diving	Scuba diving
<b>No Indication</b>	NO	NO	NO	NO
<b>WATER RESISTANT</b>	YES	NO	NO	NO
<b>WATER RESISTANT (50M/5 BAR)</b>	YES	YES	NO	NO
<b>WATER RESISTANT (100M/10 BAR or above)</b>	YES	YES	YES	NO

- Do not operate the buttons when the watch is wet.
- If the watch is exposed to salt water, rinse it in fresh water and then wipe it thoroughly dry.
- Should you find any water or condensation inside the watch, immediately have it checked. Water can corrode electric parts inside the case.

### Caution:

Leather straps are not water resistant except so indicated, even if the watch head is water resistant.

#### • ALLERGIC REACTION

Because the case and band touch the skin directly, it is important to clean them regularly. If not, shirt sleeves may be stained and those with delicate skin may develop a rash. Please wear the watch with some play to avoid any possible allergic reaction. If you develop a rash on your wrist, stop wearing and consult a physician.

#### • MAGNETISM/STATIC ELECTRICITY

Your watch will not be affected by magnetism generated by household electric appliances but keep your watch away from a place where the watch is subject to strong electric field and static electricity.

#### • SHOCKS AND VIBRATIONS

Your watch may be worn for normal sports activities, However, be careful not to drop it or hit it on hard surfaces and avoid any severe impacts.

#### • TEMPERATURE

Your watch works with stable accuracy within a temperature range between 0°C and 50 °C. Do not expose the watch to a place exceeding this temperature range.

#### • CLEANING

Use only a soft cloth and clean water for cleaning your watch. Never use chemicals, especially soap.

### ■ SERVICE

When your LORUS watch requires repair or servicing, please see the enclosed WARRANTY/GUARANTEE.

Printed in China