



A Watch You Can Trust

**INSTRUCTION MANUAL FOR
WATCH CALIBRE
Z004**



WARNING



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian Poisons Information Centre immediately on 13 11 26 (New Zealand 0800 764 766) for 24 / 7 fast, expert advice.

INSTRUCTION MANUAL FOR STOP WATCH

Your Chronograph features:

1. time / calendar display
2. 24 - hour stopwatch
3. alarm
4. hourly chime
5. 12 / 24 - hour mode option

TIME / CALENDAR DISPLAY MODE

1. Time display in hour, minutes, seconds and day of week
- normal time display state
2. Calendar display in month, date, day of week
3. Alarm time display and disarm
- holding down S1
4. Alarm on (A on) / off (A off)
- holding down S1 and S3
5. Chime on (all day - flags on) / off (all day - flags off)
- holding down S1 and S2

To set time and calendar - depress S2 three times

- select flashing digit(s) to be set by depressing S1 and then advance figure by depressing S3 (fast advance by holding down S3 for more than 2 seconds)
- select 12 / 24 -hour cycle option when setting normal time hour by advancing figure to " A " / " P " for 12 - hour mode or " H " for 24 - hour mode
- depress S2 once again will return to time display state

To set alarm time - depress S2 twice

- set alarm hour and minutes in the same way as above
- depress S2 once again will return to time display state

STOPWATCH MODE


This mode counts in 1 / 100th of a second interval for the first 30 minutes of timing (29min 59⁹⁹ sec), and then in 1 second increment up to a maximum of 24 hours (23hr:59min59sec).

To enter stopwatch mode - depress S2 in time display state



1. Start / Stop - depress S3 once
2. Split (lap) time - depress S1 to 'freeze' elapsed time display while counting, and depress S1 again to resume timing
3. Reset - depress S1 when the stopwatch stops counting


To return to time display state - depress S2 once again

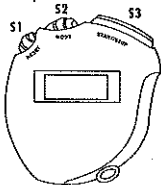Battery replacement LR44 or equivalent



BATTERY REPLACEMENT:

1. Turn  and remove the cover
2. Change the new battery
3. Replace and turn  the cover



Remarks: Please be careful not to lose the "O" ring (small rubber ring) when opening the battery hatch and make sure that the "O" ring is re-stored properly after battery replacement.

MANUEL D'INSTRUCTIONS POUR CHRONOMÈTRE

Caractéristiques de votre chronographe

1. Affichage heure/date
2. Chronomètre 24-heures
3. Alarme
4. Carillon toutes les heures
5. Option de modes 12 /24-heures

MODE D'AFFICHAGE HEURE/CALENDRIER

1. Affichage de l'heure en heure, minutes, secondes et jour de la semaine
- état d'affichage d'heure normal.
2. Affichage de calendrier par mois, date et jour de la semaine.
3. Affichage et désarmement de l'heure d'alarme
- appuyer sur S1
4. Pour mettre alarme en marche/en arrêt (on/off)
- appuyer sur S1 et S3
5. Pour mettre le carillon en marche/en arrêt (flags on/flags off)
- appuyer sur S1 et S2

Pour régler l'heure et le calendrier - appuyer sur S2 trois (3) fois

- Sélectionner le chiffre clignotant à être réglé en appuyant sur S1 et le chiffre s'avancera en appuyant sur S3 (pour avancer rapidement appuyer sur S3 pour plus de 2 secondes).
- Sélectionner l'option cycle de 12/24 heures lors du réglage de l'heure normal en avançant le chiffre à "A"/"P" pour mode 12-heures ou "H" pour mode 24-heures
- Appuyer sur S2 encore un fois pour retourner à l'état d'affichage de l'heure.

Pour régler l'heure de l'alarme - appuyer sur S2 deux (2) fois

- Régler l'heure de l'alarme de la même façon que mentionné ci-haut.
- Appuyer sur S2 de nouveau et vous retournerez à l'état d'heure normale.

MODE CHRONOMÈTRE

Cette mode calcule en 1/1000 de seconde pour les premières 30 minutes de réglage (29 min 5999 sec) et ensuite en incréments de 1 seconde jusqu'à un maximum de 24 heures (23 h/59 min/59sec).

Pour activer le chronomètre, appuyer sur S2 dans l'état d'affichage de l'heure

1. Commencer/Arrêter - appuyer sur S3 une (1) fois
2. Temps (tour) Intermédiaire - appuyer sur S1 pour 'immobiliser' le temps écoulé et appuyer sur S1 de nouveau pour résumer le minuteur.
3. Recommencer - appuyer sur S1 lorsque le chronomètre recommencer à compter.

Pour retourner à l'état d'affichage de l'heure - appuyer sur S2 de nouveau.

Remplacement de la pile LR44 ou équivalent.

REPLACEMENT DE LA PILE

1. Tourner et enlever le couverc
2. Changer la pile
3. Replacer la couverc et fermer.

N.B. Assurez-vous de ne pas perdre le cerceau "O" (en caoutchouc) lorsque vous ouvrez le dos du chronomètre et remplacez-le lorsque que vous avez compléter le changement de pile.